



Gateway MD2614u CD Drive Replacement

This guide will instruct guide you replace the CD drive on the Gateway MD2614u

Written By: Nelson





TOOLS:

- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [CD-Drive](#) (1)

Step 1 — CD Drive



- Locate the circled screw
- Carefully unscrew, making sure not to strip out the screw

Step 2



- Use any tool with a flat edge in order to pry out the CD-Drive, preferably a plastic tool (although a coin or a flat head screwdriver will work just as well).

Step 3



- Once the CD drive has been pried out enough, you can pull it out without damaging the other components

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 10:34:08 PM.